KIRKEDAL®
By TreeTops


INSTALLATION GUIDE
KIRKEDAL ALUMINIUM GATE





PARTS LIST

KIRKEDAL ALUMINIUM GATE

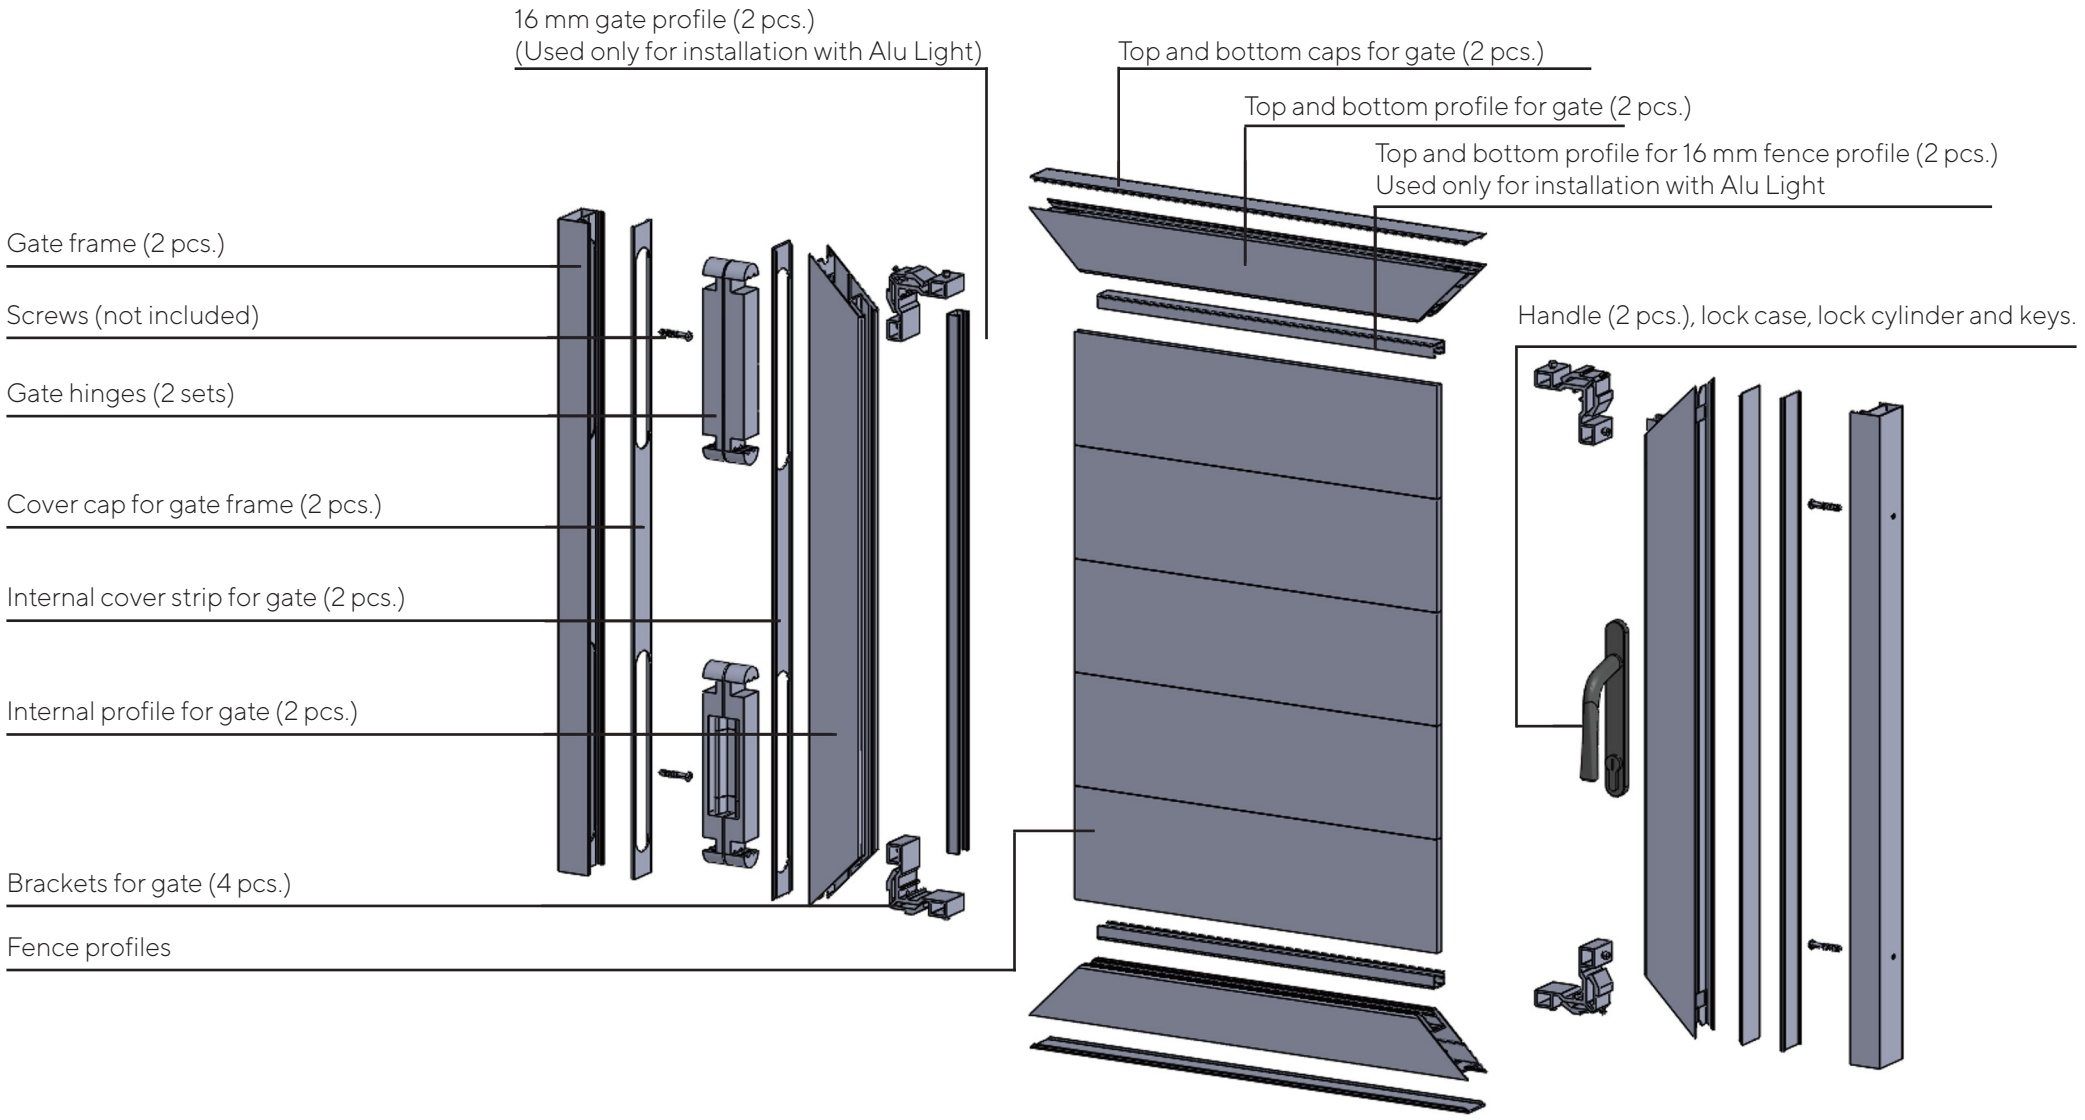

CORRECT INSTALLATION OF

KIRKEDAL ALUMINIUM GATE

BEFORE YOU BEGIN:

Always check that the delivered materials match your order and that the quality meets expectations, as no claims can be made after installation/assembly. There is a 2-year warranty in accordance with the general provisions of the Danish Sale of Goods Act. The warranty does not cover faults, damage, or wear caused by incorrect use or normal wear and tear.


Installation/assembly is carried out at your own risk. No warranty claims can be made for Kirkedal materials that have not been installed correctly.


The delivered Kirkedal Aluminium Fence must be kept dry and protected from sunlight until installation. Packages must be stored flat and evenly.

HOLE DIMENSIONS AND POST SPACING:

Kirkedal aluminium posts must be set in the ground using wet concrete and installed 900 mm into the ground. Ensure that the posts are perfectly vertical using a spirit level.

When installing posts for the gate, the distance between the two posts must be 972.4 mm ± 5 mm tolerance.

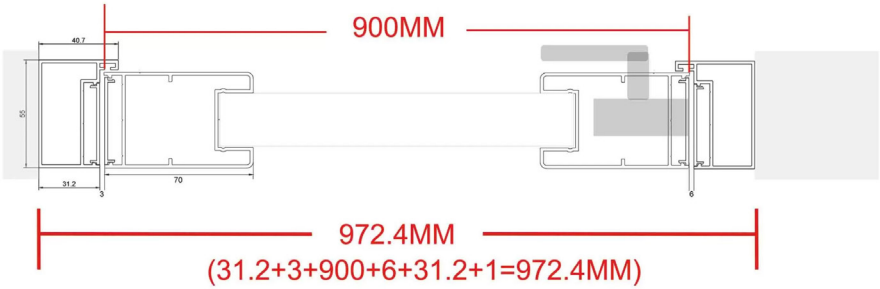

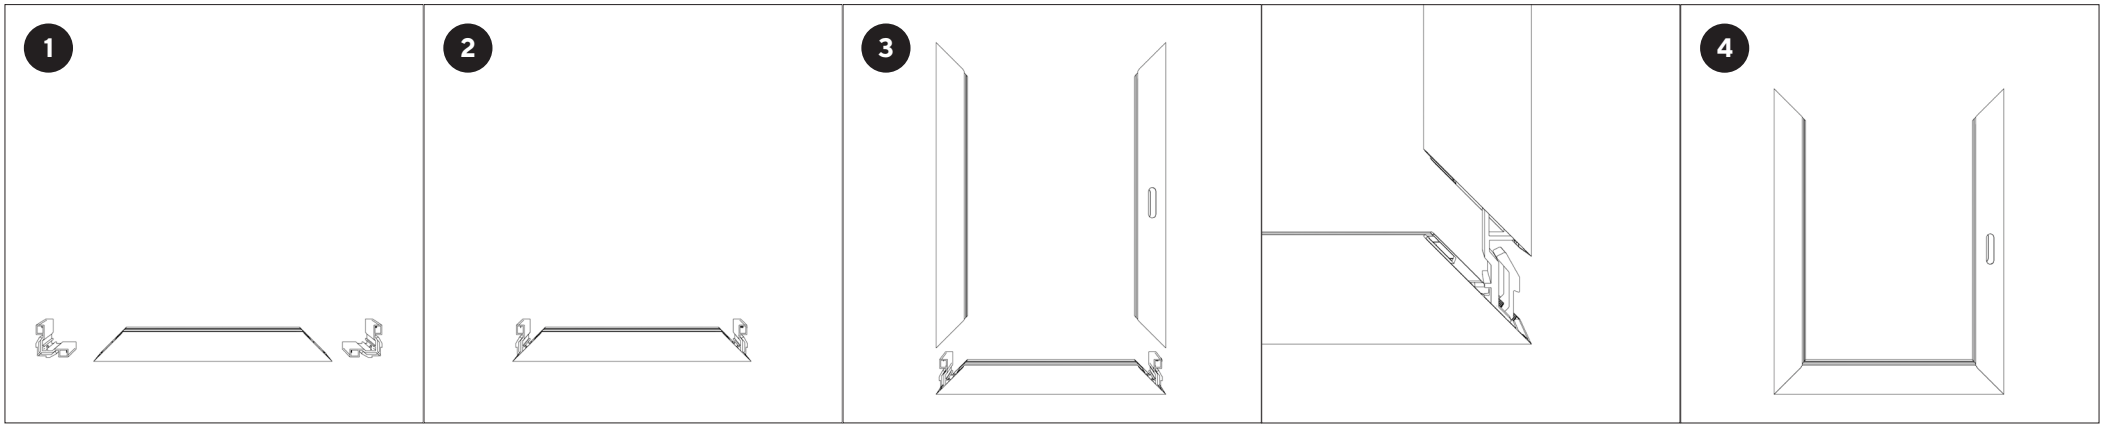



1: Insert the bracket.


2: Use screws to fasten the bracket to the internal bottom profile.

3: The bracket connects the two internal profiles to the bottom profile.


4: When using a 16 mm fence profile, the 16 mm gate profiles must be used. For other fence profile thicknesses, this profile is not required.

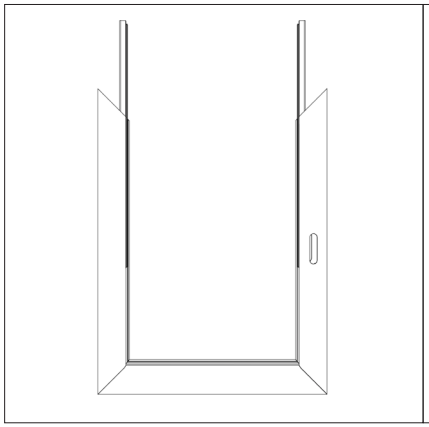

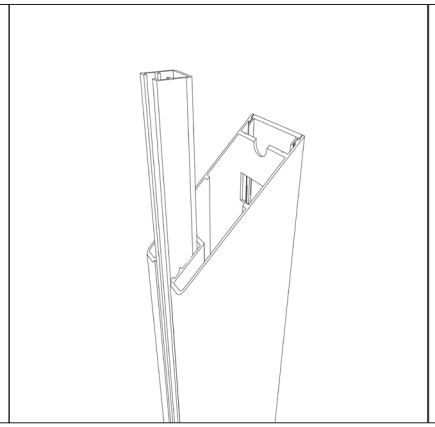

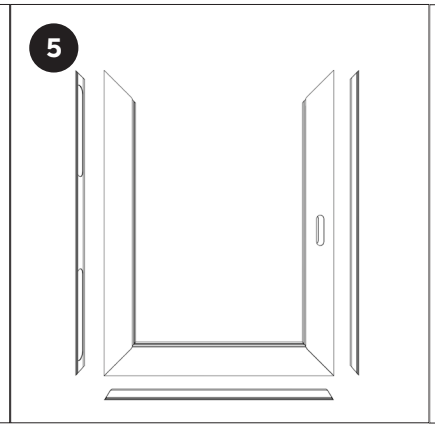


5: Install the cover strips onto the internal profiles to conceal the screws.

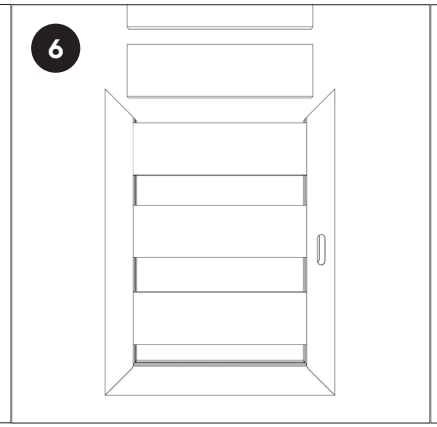


6: Kirkedal fence profiles should be cut in half using suitable tools. The cut profiles are then inserted into the gate frame to achieve the desired gate height.



7: Then install the top profile and the internal profiles with brackets

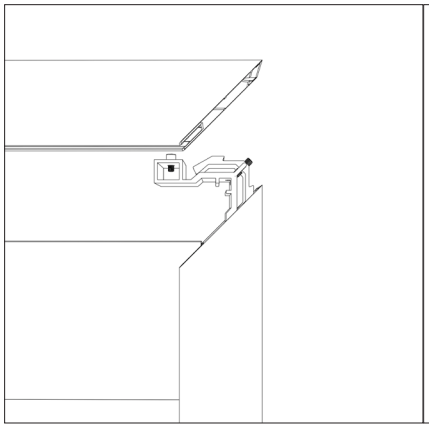


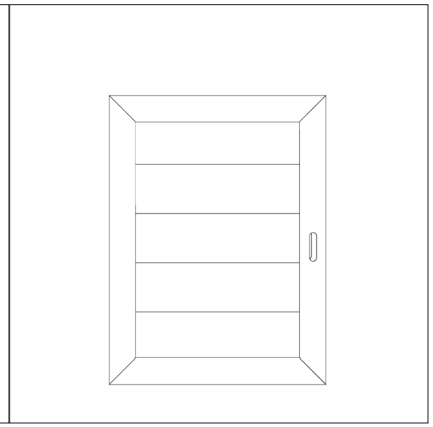


MONTERING AF LÅGE TIL STOLPE

CORRECT INSTALLATION OF


KIRKEDAL ALUMINIUM GATE

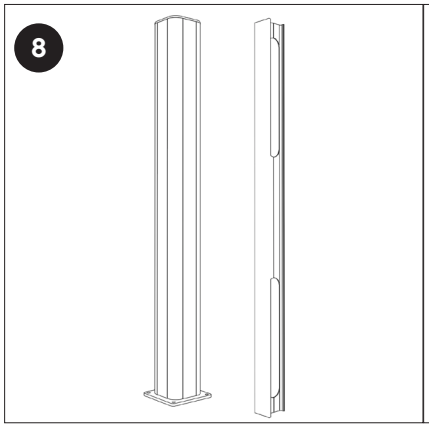


8: Mount the gate frame to the aluminium post.

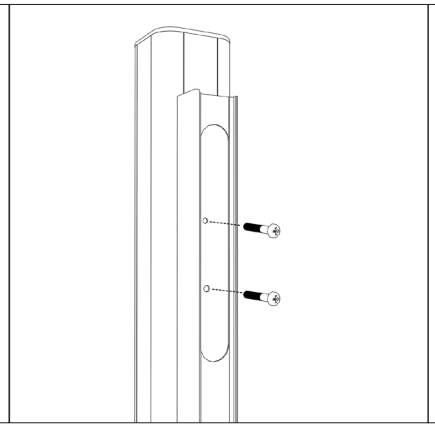


Use self-tapping screws (not included) to fasten the rail.

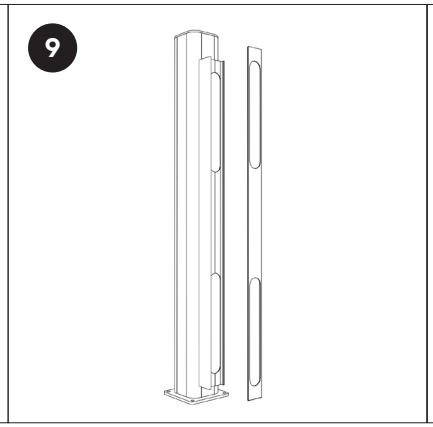


9: Install the gate frame cover cap.

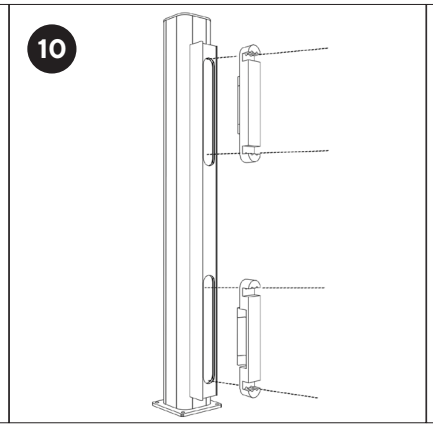


10: Mount the hinges to the gate frame using screws.

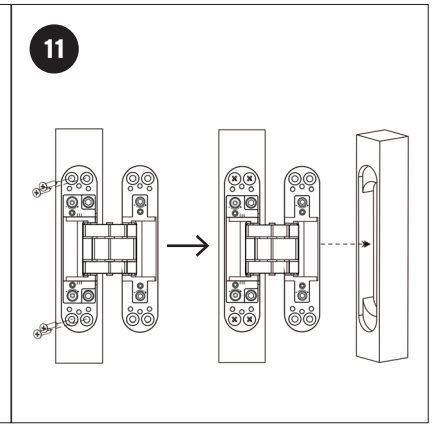


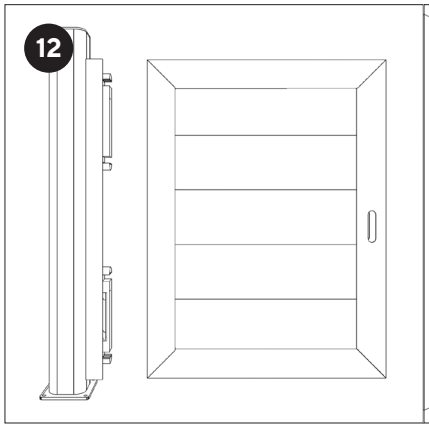

12: Mount the assembled gate onto the hinges using screws.

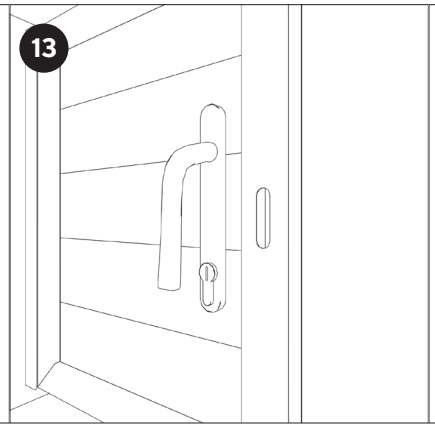

13: Install the handle and cylinder.

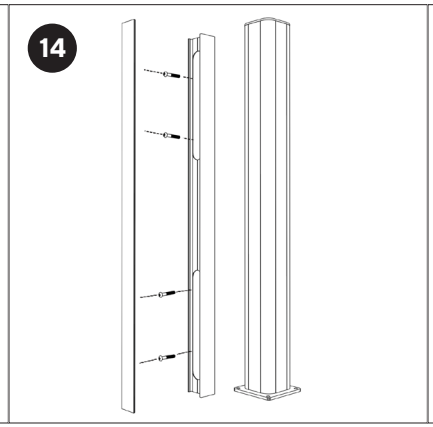

14: Mount the gate frame to the opposite post using the same method.



15: Fully assembled gate.

Certifications, fire classifications, and environmental documentation depend on the product variant and intended application. Relevant certificates and declarations of conformity are available upon request. No rights can be derived from this document. We reserve the right to make changes and accept no liability for typographical or printing errors. For the latest version, visit: www.kirkedalkomposit.dk/montering/

TreeTops Trading A/S . Bavnevej 32 . DK-6580 Vamdrup . Tlf.: +45 70 266 233 . info@treetops.dk . www.treetops.dk

Vers: TT 001
28.10.2026